

AXIS Radar Integration for Microbus

User manual

AXIS Radar Integration for Microbus

Table of Contents

About the application	3
Get started	4
Preparations	4
Install the application	4
Configure the application	5

AXIS Radar Integration for Microbus

About the application

About the application

With AXIS Radar Integration for Microbus, you can pair an Axis radar or radar-video fusion camera with a speed sign with LED display from Microbus.

The setup is simple; the radar measures the speed of approaching vehicles in a defined area and sends the data to the sign, and the sign displays the speed to the drivers. You can also configure the behavior of the sign to fit your specific requirements, for example if you want the sign to flash the speed when drivers are speeding.

The application is compatible with Axis radars and radar-video fusion cameras used with speed signs from Microbus AB. For more information about compatible signs, see leddisplay.se/produkter/vms-skyll-trafik/speed-sign/

Note

The speed sign is supplied and supported by Microbus AB, not Axis.

AXIS Radar Integration for Microbus

Get started

Get started

Preparations

- Install the Axis radar or radar-video fusion camera according to the user documentation provided on *axis.com*.
- Install the speed sign according to the user documentation provided by Microbus AB.
- Set up scenarios in the radar's web interface to define the area of interest and to set speed limit filters. See the user manual for your Axis radar or radar-video fusion camera on *axis.com* for more information.

If you want to log the radar data for statistical processing, use AXIS D2110-VE Security Radar with AXIS Speed Monitor. See the user manual for *AXIS Speed Monitor* for more information.

Install the application

Note

To install applications on the product you need administrator rights.

1. Go to the application's product page on *axis.com* and download the latest version of the application.

In the web interface of the radar:

2. Go to **Apps**.
3. Click **Add app**.
4. Select the file in your download folder.
5. Click **Install**.
6. Turn on the app.

AXIS Radar Integration for Microbus

Configure the application

Configure the application

Connect to the speed sign:

In the web interface of the radar:

1. Go to **Apps**.
2. Open **AXIS Radar Integration for Microbus**.

In the application:

3. Go to **IP address** to set the IP address of the sign.
4. Go to **TCP port** to set the TCP port number of the sign.

Note

See the user documentation provided by Microbus AB for more information about the sign's IP address and TCP port.

5. Click **Connect**.

Configure the sign behavior:

6. To specify how often the radar should send the maximum speed in the defined area to the speed sign, set the interval in seconds under **Update interval**.
7. To specify how long the speed of the latest passing vehicle should remain on the sign, set the duration in seconds under **Speed display duration**.
8. Turn on **Flash on speeding** if you want the sign to flash the speed when an approaching vehicle is speeding.
The speed limit filter is configured in a radar scenario.
9. To specify the interval between each flash, set the interval in seconds under **Flashing interval**.
The interval you specify between each flash will be the same as the actual duration of the flash.
10. Go to **Radar scenarios** to select the radar scenario that should send the speed and speed limit filters to the sign.
11. To verify the configuration and test the sign behavior, click **Verify configuration**.

