



Wedge Mount Installation

This document provides abbreviated instructions to install SAFR SCAN Wedge Mount. It is intended as a reference. Please see Flush Mount Guide at <http://safr.com/portal> > Documentation for more detailed information.

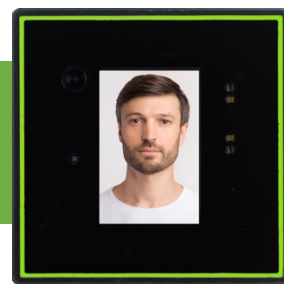

Package Contents

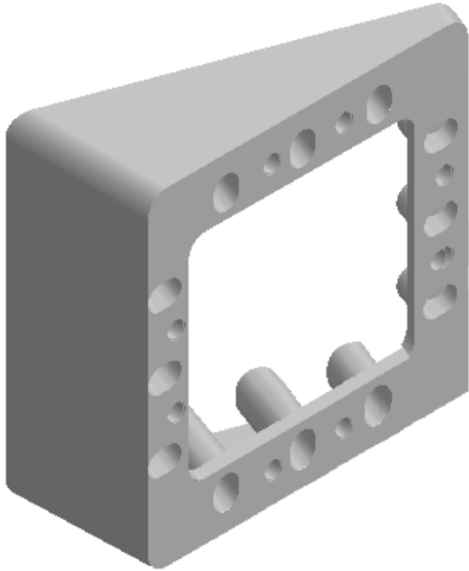

#	Description	Quantity
1	Wedge Mount Housing	1
2	#6-32 machine screws	4

- Included screws for attaching SAFR SCAN mounting bracket to wedge mount.

Tools Required

- Phillips head screwdriver

Not included

- SAFR SCAN mounting bracket (included with SC100 and SC200)
- 2 or 4-Gang Junction Box
- Qty 4 #6-32 1" machine screws to attach Wedge Mount to Junction Box



Site Preparation

SAFR SCAN Wedge Mount is intended to be mounted to a standard 2 or 4-gang electrical junction box. Junction box should be mounted according to building specifications with face of junction box flush to the wall outer surface. For outdoor, a weatherproof junction box must be used.

Junction box should be mounted at 55 inch (140 cm) height and as much as possible in line with the direction of travel. See SAFR SCAN Wedge Mount Installation Guide for details on recommended installation height.

Attach Wedge Mount to Junction Box


Once the junction box is mounted at desired height, wedge mount should be mounted according to the following.

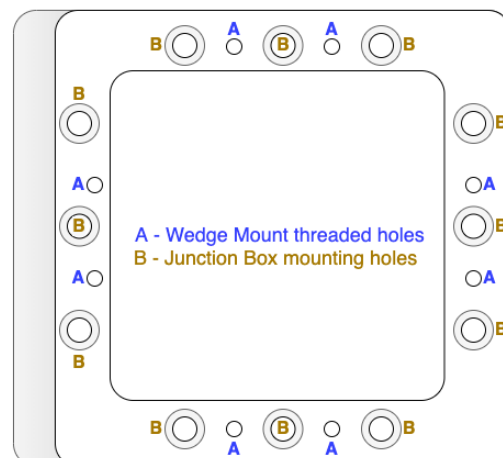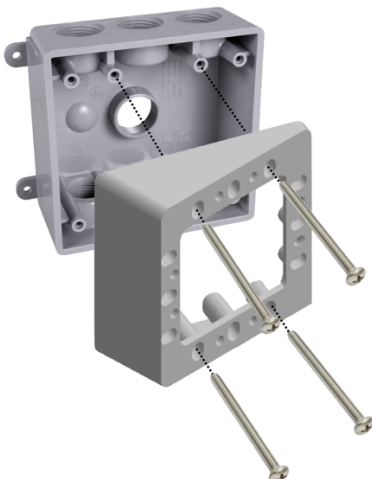


Attach Mounting Bracket to Wedge Mount

SAFR SCAN SC100 and SC200 models come with a mounting bracket and gaskets as shown below. The mounting bracket must be detached from SAFR SCAN before attaching to wedge mount. Attach SAFR SCAN mounting bracket to the wedge mount using #6-32 machine screws included with the wedge mount through Wedge Mount mounting holes (B) as shown below.

Mounting Bracket (included with SC100/SC200)

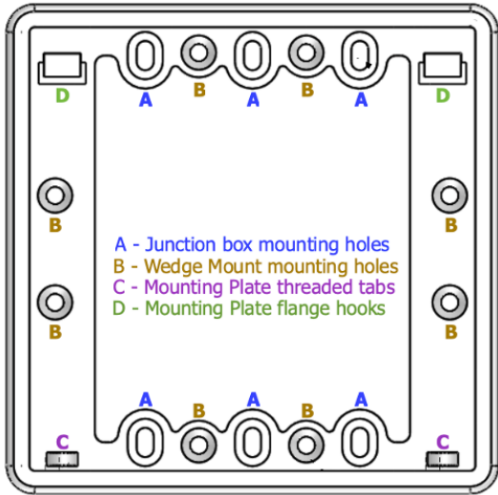


Wedge Mount and Mounting Bracket Assembly

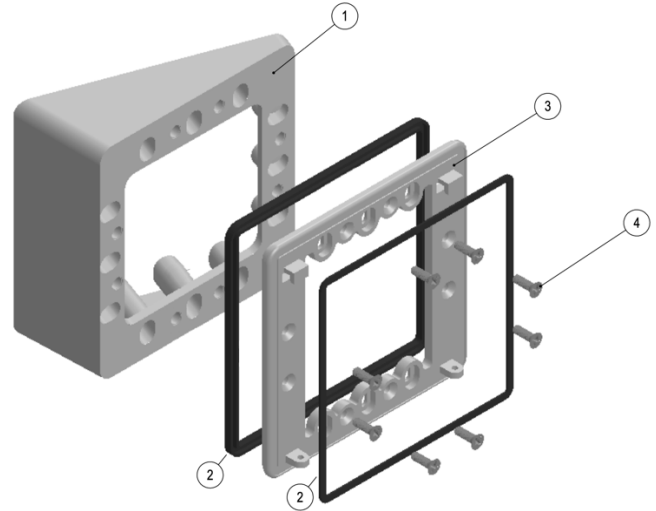

Attach SAFR SCAN to Mounting Bracket

1. Align SAFR SCAN reader onto Mounting Bracket so that rectangular cutouts at top of SCAN housing are aligned with metal flange hooks at top of Mounting Bracket.
2. Slide SAFR SCAN housing upwards until the housing presses firmly against the metal flang hooks.
3. Hold SAFR SCAN in place while fastening to Mounting Plate threaded tabs (C) with included screws using the included 2mm hex wrench. Screws are inserted from bottom of the scan housing.

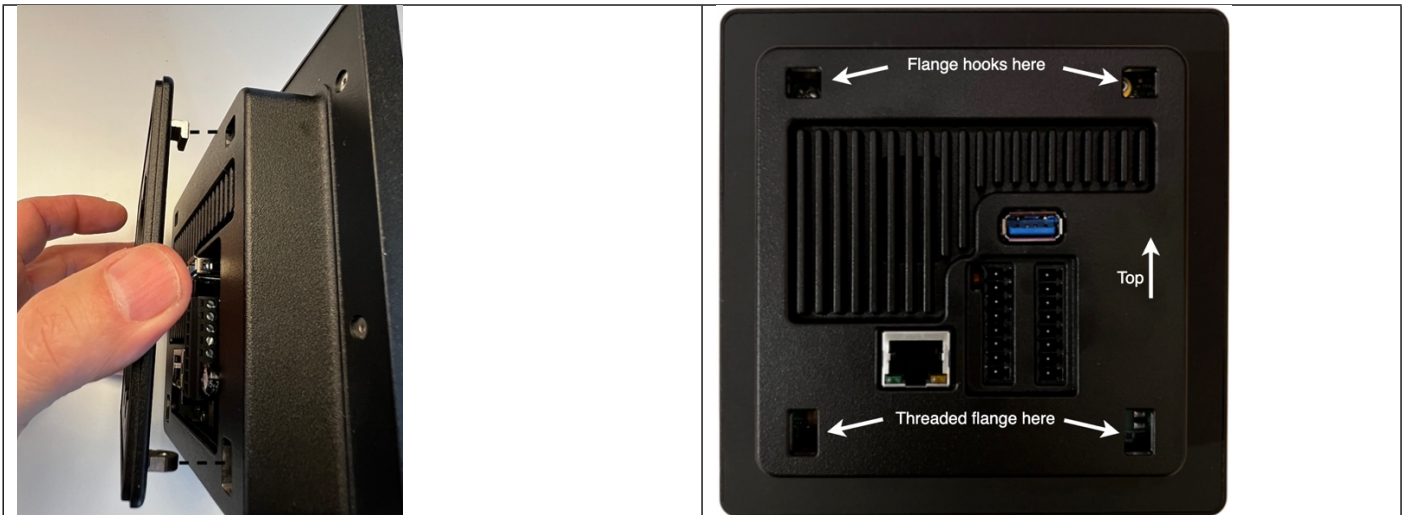

For product downloads, go to <http://safr.real.com/products>.

For help, go to <http://support.safr.com> or email us at support@safr.com.

By using this product you acknowledge and agree to be bound to the Terms of Service at <https://safr.com/terms-of-use-branded-products> and the End-User License Agreement at <https://safr.com/scan-eula>.

Product Login



SAFR Helpdesk

